

USB VoIP Adapter Quick Guide



Installation

The following instructions will guide you through the process of installing the Personal USB Adapter.

STEP 1: If Skype™ is not already installed on your computer, visit <http://www.skype.com> and follow the instructions there to install Skype™. Verify that Skype™ is working before installing the USB Adapter.

STEP 2: Insert the supplied CD-ROM into your PC CD-ROM drive. The installation should start automatically. If not, open the installation folder on the CD-ROM and double click on the **setup.exe** program as shown below.

After the installation, connect the USB cable to the USB Adapter's "USB" port as shown below:




The other end of the USB cable must be connected to a USB port on your computer or to an AC Powered USB

hub.

The USB Adapter MUST not be connected to a bus powered USB hub.

STEP 3: You would then see following screen if your Skype is already running. If not, start your Skype program. Refer to STEP 1 for how to download the Skype program.

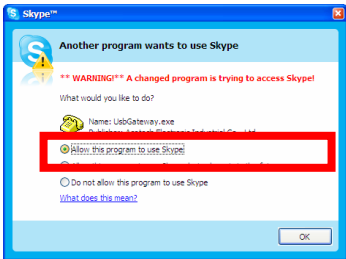


Choose the first option "Allow this program to use Skype", and press OK. Following Dashboard screen should appear, showing Skype is connected.

STEP 4: Connect a standard telephone handset (either corded or cordless) to the USB Adapter's port "**PHONE**"

using a telephone cable as shown below



STEP 5: Connect a telephone cable between the USB Adapter's port "**PSTN**" and a wall jack as shown below. Note that this is only required for making regular phone calls or for Diverting Skype calls to your mobile (or other off-site) phone or for toll bypass applications.

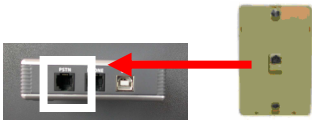

USB Adapter States

Adapter is running properly:



Adapter is not running. Please check if the USB Adapter

is properly connected to the PC.



When the USB Adapter program is not running, there is no phone in the system tray.

USB Adapter LED



Power LED: Indicating the USB Adapter is receiving power.

VoIP LED: When the USB Adapter is switched to VoIP(Skype) network, it will be lit. When there a VoIP (Skype) call, the light will be blinking.

PSTN LED: When the USB Adapter is switched to PSTN (landline) network, it will be lit. When there a PSTN call,

the light will be blinking.

Both VoIP and PSTN LED will be lit when the USB Adapter is diverting call, or when the 3-way conferencing is enabled.

Making and Receiving Calls

You can continue to use the telephone handset connected to the USB Adapter to make and receive standard telephone calls as you used without any change. To make a standard phone call, just pick up the handset and dial as you normally would.

To answer the call, just pick up the handset and speak as you normally would.

Making a SkypeOut Call

Step 1: Press *#*

Step 2: Press 00 + country code + telephone number (e.g. 001 617 555 1212) + ##

Making a Skype Call

Step 1: Press *#*

Step 2: Press "Speed Dial of the User" (e.g. 10) + ##

Setting Skype Speed Dial

Right click on the desired contact as shown below and select "Assign Speed-Dial" under Skype:

Note: There are different dial tones for PSTN and VoIP/Skype. You can switch forward and back between PSTN and VoIP/Skype through pressing **"*#*"**

